BRUGSANVISNING USER MANUAL 2 25

FOR PERFEKTE RESULTATER

Tak fordi du valgte dette produkt fra AEG. Vi har skabt det, så du kan nyde en ulastelig funktionsevne i mange år med nyskabende teknologi, der gør livet lettere – funktioner, som du ikke finder i almindelige apparater. Brug et par minutter på at læse mere – så du kan få det bedste ud af det.

TII BEHØR OG FORBRUGSVARER

I AEG's webbutik kan du finde alt, hvad du har brug for, til at holde alle dine AEG-apparater flotte og perfekt fungerende. Sammen med et stort udvalg af tilbehør, der er designet og udviklet til de høje kvalitetsstandarder, du ville forvente – fra specialkogegrej og bestikkurve til flaskeholdere og fine vaskeposer ...











Besøg webbutikken på www.aeg-electrolux.com/shop

INDHOLD

- 4 Om sikkerhed
- 8 Produktbeskrivelse
- 9 Betjeningspanel
- 12 Brug af apparatet
- 12 Indstilling af blødgøringsanlæg
- 13 Brug af filtersalt
- 14 Brug af vaske- og afspændingsmiddel
- 15 Multitab-funktion
- 15 Placering af bestik og service
- 16 Tørreprogrammer
- 18 Valg og start af opvaskeprogram
- 20 Vedligeholdelse og rengøring
- 21 Hvis noget går galt
- 24 Tekniske data
- 24 Miljøhensyn

Der er anvendt følgende symboler i denne brugervejledning:



Vigtige oplysninger om din egen sikkerhed, samt oplysninger om, hvordan du undgår skader på apparatet.



Generelle oplysninger og tips



Miljøoplysninger

Ret til ændringer uden varsel forbeholdes



OM SIKKERHED

Læs denne brugervejledning grundigt før installation og ibrugtagning af maskinen :

- Af hensyn til din og din ejendoms sikkerhed.
- Af hensyn til miljøet.
- For korrekt betjening og brug af opvaskemaskinen.

Opbevar altid brugervejledningen sammen med opvaskemaskinen, og lad den følge med, hvis du flytter eller giver den til en anden.

Producenten kan ikke drages til ansvar, hvis apparatet installeres forkert og eller anvendelsen forårsager skade.

Sikkerhed for børn og andre udsatte personer

- Lad ikke personer, herunder børn, med nedsat fysisk mobilitet, nedsatte mentale evner eller manglende erfaring og viden betjene apparatet. De skal være under opsyn af en person, der har ansvaret for deres sikkerhed, eller instrueres i at bruge apparatet.
- Opbevar al emballage utilgængeligt for børn. Der er fare for kvælning eller personskade.
- Opbevar alle opvaskemidler et sikkert sted. Lad ikke børn røre opvaskemidlerne.
- Lad ikke børn og husdyr komme tæt på apparatet, mens døren er åben.

Generelt om sikkerhed

- Apparatets specifikationer må ikke ændres. Dette kan medføre risiko for personskade samt beskadigelse af apparatet.
- Overhold sikkerhedsanvisningerne på pakken med opvaskemidlet for at undgå ætsning af øjne, mund og hals.
- Drik ikke vandet fra opvaskemaskinen. Der kan være rester af opvaskemiddel i maskinen.
- Lad ikke lågen stå åben uden opsyn. Dette er for at forhindre personskade, eller at nogen falder over en åben låge.
- Undgå at sidde eller stå på den åbne låge.

Anvendelse

- Dette apparat er kun til husholdningsbrug. Undlad at bruge opvaskemaskinen til andre formål for at forhindre eller skade på ejendom.
- Brug kun maskinen til tilbehør, der egner sig til maskinopvask.
- Undlad at bruge brændbare produkter eller genstande, der er fugtet med brændbare produkter, i maskinen eller i nærheden af eller på denne. Der er fare for eksplosion eller brand.
- Sæt knive og andre ting med skarpe spidser i bestikkurven med spidsen nedad. De kan evt. også lægges vandret i den øverste kurv eller i kurven til knive (ikke alle modeller har en kurv til knive).
- Brug kun foreskrevne produkter til opvaskemaskiner (opvaskemiddel, filtersalt, afspændingsmiddel).
- Blødgøringsanlægget kan tage skade af salttyper, der ikke er beregnet til opvaskemaskiner

- Påfyld salt i maskinen, inden du starter et opvaskeprogram. Saltrester i opvaskemaskinen kan forårsage rust eller lave hul i bunden af maskinen.
- Fyld aldrig andre midler (afkalkningsmiddel til opvaskemaskine, flydende opvaskemiddel) i beholderen til afspændingsmiddel. Det kan skade maskinen.
- Sørg for, at spulearmene kan bevæge sig frit, før du starter et opvaskeprogram.
- Der kan komme meget varm damp ud af opvaskemaskinen, hvis du åbner lågen, mens maskinen er i gang. Dette kan medføre skoldningsfare.
- Tag ikke opvasken ud af maskinen, før opvaskeprogrammet er slut.

Vedligeholdelse og rengøring

- Sluk for maskinen, og tag stikket ud af kontakten inden rengøring.
- Undlad at bruge brændbare produkter eller produkter, der kan forårsage rust.
- Brug ikke maskinen uden filtrene. Sørg for at sætte filtrene rigtigt i. En forkert isættelse resulterer i, at opvasken bliver utilfredsstillende, og maskinen tager skade.
- Undlad at bruge højtryksrenser eller damp til at rengøre maskinen. Der er risiko for elektrisk stød og skader på apparatet.

Installation

- Kontrollér, at apparatet ikke er beskadiget. Du må ikke installere et tilslutte et beskadiget apparat. Kontakt forhandleren.
- Fjern al emballage, før opvaskemaskinen installeres og tages i brug.
- El- og blikkenslagerarbejde samt installation må kun udføres af en faguddannet person. Dermed forhindrer du materiel skade eller personskade.
- Sørg for, at elstikket er taget ud af stikkontakten under installationen.
- Undgå at bore huller i apparatets sider, så der opstår fare for at beskadige de hydrauliske og elektriske dele.
- Vigtigt! Følg instruktionerne i skabelonen, som leveres sammen med apparatet:
 - Installation af apparatet.
 - Montering af dørpanel.
 - Tilslutning til vandsyning og afløb.
- Sørg for, apparatet er installeret under og opad stabile køkkenelementer.

Forholdsregler mod frost

- Stil ikke maskinen et sted, hvor temperaturen kommer under 0 °C.
- Producenten påtager sig intet ansvar for frostskader.

Tilslutning, vand


- Brug nye slanger ved tilslutning af maskinen til vandforsyningen. Brug ikke brugte slanger.
- Tilslut ikke apparatet til nye rør eller rør, der ikke har været brugt i længere tid. Lad vandet løbe i nogle minutter, og forbind så tilløbsslangen.
- Undgå at mase eller forårsage skade på vandslangerne, når apparatet installeres.
- Kontrollér, at samlingerne er tætte, så der ikke kan sive vand ud.
- Sørg for, at slangerne er tætte inden ibrugtagning af apparatet.

- Tilløbsslangen har en sikkerhedsventil og en dobbelt kappe med et indvendigt elkabel. Der er kun tryk i indløbsslangen, når vandet løber. Hvis der er en lækage i tilløbsslangen, afbryder sikkerhedsventilen det løbende vand.
 - Pas på, når du tilslutter tilløbsslangen:
 - Undlad at lægge tilløbsslangen eller sikkerhedsventilen i vand.
 - Tag straks stikket ud af stikkontakten, hvis tilløbsslangen eller sikkerhedsventilen beskadiges.
 - Tilløbsslangen med sikkerhedsventil må kun udskiftes af servicecentret.



ADVARSEL

Højspænding.

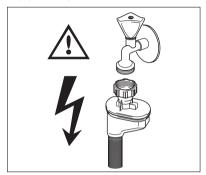

Tilslutning, el

- Maskinen skal tilsluttes strøm m/jord, jvf. Stærkstrømsreglementet.
- Sørg for, at de elektriske data på typeskiltet svarer til strømforsyningen.
- Brug altid en korrekt monteret lovlig stikkontakt.
- Brug ikke multistik og forlængerledninger. Der er risiko for brand.
- Udskift ikke elledningen. Kontakt servicecentret.
- Undgå at mase eller forårsage skade på stikket og ledningen bag apparatet.
- Sørg for, at der er adgang til netstikket efter installationen.
- Undgå at slukke for maskinen ved at trække i ledningen. Tag altid selve netstikket ud af kontakten.

Indvendig belysning

Dette apparat er udstyret med indvendig belysning, der tænder, når lågen åbnes, og slukker, når lågen lukkes.



ADVARSFI

Lysstråle fra diode. Se ikke direkte ind i lysstrålen.

Lampens LED er CLASS 2 og er i overensstemmelse med IEC 60825-1: 1993 + A1:1997 + A2:2001.

Bølgelængde for udsendt lys: 450 nm

Maks. afgivet effekt: 548 μW



Ved nødvendig udskiftning af den indvendige belysning: Kontakt vores servicecenter. Tag ledningen ud af stikkontakten, inden den indvendige belysning udskiftes.

Servicecenter

- Reparation eller arbejde på apparatet må kun udføres af en godkendt tekniker. Kontakt servicecentret.
- Brug kun originale reservedele.

Kassering af apparatet

- Sådan undgås risiko for personskade eller beskadigelse:
 - Tag stikket ud af kontakten.
 - Klip elledningen af, og kassér den.
 - Fjern lugelåsen. Det forhindrer, at børn eller dyr kan smække sig inde i apparatet.
 Der er fare for kvælning.
 - Kassér apparatet på kommunens genbrugsstation.




ADVARSEL

Opvaskemidler er farlige og kan forårsage ætsning!

- Kontakt straks en læge, hvis der sker et uheld med disse opvaskemidler.
- Kontakt straks en læge, hvis opvaskemidlet kommer ind i munden.
- Kommer vaskemidlerne i øjnene, skylles straks grundigt med vand, og læge kontaktes.
- Opbevar opvaskemidlerne på et sikkert sted og utilgængeligt for børn.
- Lad ikke vaskemaskinens låge stå åben, når der er opvaskemiddel i beholderen til opvaskemiddel.
- Fyld først beholderen til opvaskemiddel op, lige inden du starter et opvaskeprogram.

PRODUKTBESKRIVELSE

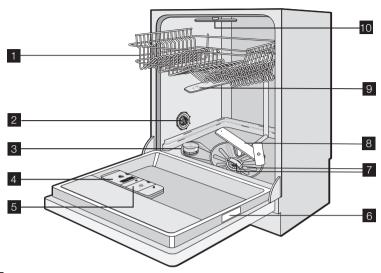

- 1 Den øverste kurv
- 2 Justering af vandets hårdhedsgrad
- 3 Saltbeholder
- 4 Beholder til opvaskemiddel
- 5 Beholder til afspændingsmiddel
- 6 Typeskilt
- 7 Filtre
- 8 Nederste spulearm
- 9 Mellemste spulearm
- 10 Øverste spulearm

TimeBeam


TimeBeam viser på køkkengulvet opvaskeprogramtiden eller nedtællingen af den udskudte start.

Med TimeBeam ved man altid hvor lang tid, der er tilbage af vaskeprogrammet og den udskudte start.

Der er ni forskellige farver for TimeBeam. Se under "Betjeningspanel".



Hvis apparatet er installeret på højden med en integreret låge, kan man ikke se TimeBeam.

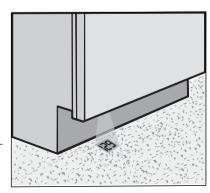


TimeBeam viser:

- Opvaskeprogramtiden. Det tæller ned i trin af ét minut
- Når opvaskeprogrammet er slut, viser der sig et nul på køkkengulvet
- Nedtællingen til udskudt start i trin af én time (24t, 23t...).
- TimeBeam slås fra, når maskinen slukkes.

BETJENINGSPANEL

Betjeningsknapperne er placeret øverst på betjeningspanelet. Apparatets låge skal stå på klem for at betjene knapperne.



- 1 Tænd-/sluk-knap
- 2 Display
- 3 Knap til udskudt start
- 4 Programknap
- 5 Knap til ekstra hygiejne
- 6 ÖKO PLUS-knap
- 7 Multitab-knap
- 8 RESET-knap
- 9 Kontrollamper

Kontrollamper				
\$	Salt-lampe. Kontrollampen lyser, når der skal påfyldes salt i beholderen. ¹⁾ Når beholderen er fyldt, kan salt-lampen fortsætte med at lyse i nogle timer. Det påvirker ikke apparatets funktion i øvrigt.			
*	Kontrollampe for afspændingsmiddel. Lampen tændes, når beholderen til afspændingsmiddel skal påfyldes. ¹⁾			
\rightarrow	Kontrollampe for Slut. Tændes, når et opvaskeprogram er slut.			

¹⁾ Når beholderne til salt og/eller afspændingsmiddel er tomme, lyser de tilhørende kontrollamper ikke, hvis et opvaskeprogram er i gang.

Tænd-/sluk-knap

Tryk på denne knap for at tænde eller slukke for apparatet.

Ti minutter efter afslutningen af vaskeprogrammet slukker AUTO OFF-funktionen automatisk for maskinen. Dette hjælper med at reducere energiforbruget.

Visning

Displayet viser:

- Den elektroniske indstilling af blødgøringsanlægget.
- Om tilsætning af afspændingsmiddel er slået til/fra (kun når Multitab-funktionen er slået til)
- Opvaskeprogrammets nummer
- Resttid, indtil opvaskeprogrammet er slut
- Afslutning af et opvaskeprogram (displayet viser nul)
- Tiden til den udskudte start
- Alarmkoderne
- Aktiveringen/deaktiveringen af lydsignaler.

Knap til udskudt start

Tryk gentagne gange på denne knap for at udskyde starten af opvaskeprogrammet fra 1 til 24 timer.

Programknap

Tryk på knappen en eller flere gange for at vælge et opvaskeprogram. Hver gang du trykker på knappen, viser displayet et nummer, der er relateret til et opvaskeprogram. Se under "Opvaskeprogrammer".

Knap til ekstra hygiejne

Denne funktion giver bedre resultater for hygiejnen. Under skylletrinnet bliver temperaturen på 70 °C i 10 til 14 minutter.

Tryk på denne knap for at aktivere funktionen. Kontrollampen giver sig til at lyse.

ÖKO PLUS-knap

Denne funktion reducerer temperaturen under tørringen. Strømforbruget reduceres med 25 %.

Opvasken kan være våd, når programmet er slut, og du åbner lågen til apparatet. Det anbefales, at du lader lågen stå på klem, så opvasken kan tørre.

Tryk på denne knap for at aktivere funktionen. Den tilførende kontrollampe tændes.

Multitab-knap

Tryk på denne knap for at aktivere eller deaktivere Multitab-funktionen.

Når du aktiverer funktionen, lyser den pågældende lampe.

Når du deaktiverer funktionen, slukkes den pågældende lampe.

RESET-knap

Tryk på denne knap for at annullere:

- Et igangværende opvaskeprogram
- Nedtællingen til udskudt start.

Indstillingsfunktion

Ved følgende operationer skal apparatet stå på indstillingsfunktion:

- Valg og start af et opvaskeprogram.
- Valg og start af en udskudt start.
- Ved elektronisk indstilling af niveauet for blødgøringsniveau.
- Om tilsætning af afspændingsmiddel er slået til/fra (kun når Multitab-funktionen er slået til).
- Slå lyd til/fra.

Tænd for apparatet. Apparatet står i indstillingsfunktion, når:

• Displayet viser to vandrette statuslinjer.

Tænd for apparatet. Apparatet står ikke i indstillingsfunktion, når:

- Displayet viser tiden af opvaskeprogrammet eller en udskudt start.
 - For at gå tilbage til indstillingsfunktion er det nødvendigt at afbryde programmet eller afbryde udskudt start. Se under "Valg og start af vaskeprogram".

Lydsignaler

Du kan høre lydsignalerne under disse betingelser:

- Opvaskeprogrammet er afsluttet.
- Niveauet af blødgøringsanlægget indstilles elektronisk.
- Der er en funktionsfejl.



Fabriksindstilling: til.

Deaktivering af lydsignalerne

- 1. Tænd for apparatet.
- 2. Sørg for, at apparatet står på indstillingsfunktionen.
- 3. Tryk på knap (4) og knap (5) og hold dem nede på samme tid, indtil kontrollamperne for knap (3), (4) og (5) blinker.
- 4. Giv slip på knap (4) og knap (5).
- 5. Tryk på knap (5),
 - Lamperne for knap (3) og (4) slukkes.
 - Lamperne for knap (5) fortsætter med at blinke.
 - Displayet viser indstillingen af lydsignalerne.


<i>Ib</i>	Lydsignalerne er slået til.
ОЬ	Lydsignalerne er slået fra.

- 6. Tryk på knap (5) for at ændre indstillingen.
- 7. Deaktiver maskinen for at bekræfte.

Udfør trin (1) til (7) for at aktivere lydsignalerne igen.

BRUG AF APPARATET

- 1. Kontrollér, om det indstillede niveau for blødgøringsanlægget passer til det lokale vands hårdhedsgrad. Hvis ikke, skal blødgøringsanlægget indstilles.
- 2. Fyld saltbeholderen op med filtersalt.
- 3. Fyld beholderen til afspændingsmiddel op.
- 4. Sæt bestik og tallerkener i opvaskemaskinen.
- 5. Vælg det opvaskeprogram, der passer til opvaskens art og graden af snavs.
- 6. Fyld den rette mængde opvaskemiddel i beholderen til opvaskemiddel.
- 7. Start opvaskeprogrammet.



INDSTILLING AF BLØDGØRINGSANLÆG

Blødgøringsanlægget fjerner salte og mineraler fra ledningsvandet. Disse mineraler og salte kan skade maskinen.

Justér blødgøringsanlægget, hvis det ikke passer til det lokale vands hårdhed. Kontakt det lokale vandværk angående det lokale vands hårdhed.

Vandets hårdhedsgrad				Indstilling af hårdhe	
Tyske grader (°dH)	Franske grader (TH°)	mmol/l	Clarke-gra- der	manuelt	elek- tronisk
51 - 70	91 - 125	9,1 - 12,5	64 - 88	2 1)	10
43 - 50	76 - 90	7,6 - 9,0	53 - 63	2 1)	9
37 - 42	65 - 75	6,5 - 7,5	46 - 52	2 1)	8
29 - 36	51 - 64	5,1 - 6,4	36 - 45	2 1)	7
23 - 28	40 - 50	4,0 - 5,0	28 - 35	2 1)	6
19 - 22	33 - 39	3,3 - 3,9	23 - 27	2 1)	5 ¹⁾
15 - 18	26 - 32	2,6 - 3,2	18 - 22	1	4
11 - 14	19 - 25	1,9 - 2,5	13 - 17	1	3
4 - 10	7 - 18	0,7 - 1,8	5 - 12	1	2
< 4	< 7	< 0,7	< 5	1 ²⁾	1 ²⁾

¹⁾ Fabriksindstilling.


²⁾ Brug ikke salt på dette niveau.



Blødgøringsanlægget skal både indstilles manuelt og elektronisk.

Manuel indstilling

Sæt knappen til indstilling af hårdhedsgrad i position 1 eller 2 (se tabel).

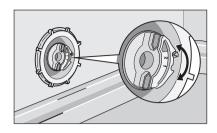

Elektronisk indstilling

- 1. Tænd for apparatet.
- Sørg for, at apparatet står på indstillingsfunktionen.
- 3. Tryk på knap (4) og knap (5) og hold dem nede på samme tid, indtil kontrollamperne for knap (3), (4) og (5) blinker.
- 4. Giv slip på knap (4) og knap (5).
- Tryk på knap (3),
 - Lamperne for knap (4) og (5) slukkes.
 - Lamperne for knap (3) fortsætter med at blinke.
 - Lydsignalerne høres.
 - Displayet viser indstillingen af blødgøringsanlægget (f.eks.: **5** / og du hører fem lydsignaler = niveau 5).
- Tryk gentagne gange på knap (3) for at ændre indstillingen.
- 7. Deaktiver maskinen for at bekræfte.



Hvis blødgøringsanlægget indstilles elektronisk til niveau 1, forbliver salt-lampen slukket.

BRUG AF FILTERSALT

Hvordan du fylder saltbeholderen


- 1. Drei hætten mod uret for at åbne saltbeholderen
- 2. Hæld 1 liter vand i saltbeholderen (kun første gang, du påfylder salt).
- Brug tragten til at fylde salt i beholderen.
- 4. Fiern salt rundt om saltbeholderens åb-
- 5. Luk saltbeholderen ved at dreje hætten med uret.



Det er normalt, at vandet i saltbeholderen løber over, når der påfyldes salt.



BRUG AF VASKE- OG AFSPÆNDINGSMIDDEL

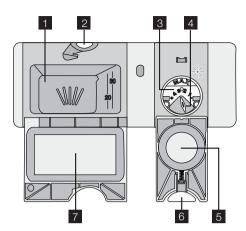

Brug af opvaskemiddel



Brug ikke mere end den korrekte mængde opvaskemiddel af hensyn til miljøet. Følg anbefalingerne fra producenten af opvaskemidlet på pakningen.

Sådan fyldes beholderen til opvaskemiddel:

- 1. Tryk på udløserknappen **2** for at åbne låget **7** til beholderen til opvaskemiddel.
- 2. Fyld opvaskemiddel i beholderen 1.
- 3. Hvis opvaskeprogrammet har et trin med forvask, anbringes en lille mængde opvaskemiddel i hulningen udvendig på låget til opvaskemiddel.
- 4. Læg tabletten i beholderen til opvaskemiddel, hvis du bruger tabs 1.
- 5. Luk beholderen til opvaskemiddel. Tryk på låget, indtil det låses fast.



Brug lange opvaskeprogrammer, når du bruger opvaskemidler i tabletform (tabs). Disse kan ikke blive helt opløst med korte opvaskeprogrammer og kan forringe opvaskeresultaterne.

Brug af afspændingsmiddel



Afspændingsmiddel gør det muligt at tørre tallerkener og fade, uden at de får pletter og striber.

Beholderen til afspændingsmiddel tilfører automatisk afspændingsmiddel under det sidste skylletrin.

Fremgangsmåde for påfyldning af beholderen til afspændingsmiddel:

- 1. Tryk på udløserknappen 6 for at åbne låget 5 til beholderen til afspændingsmiddel.
- 2. Fyld beholderen til afspændingsmiddel op 3 med afspændingsmiddel. Påfyld kun til "Max"-mærket.
- 3. Tør spildt afspændingsmiddel op med en sugende klud, så der ikke dannes for meget skum under det næste program.

4. Luk beholderen til afspændingsmiddel. Tryk på låget, indtil det låses fast.

Indstil dosering af afspændingsmiddel

Fabriksindstilling: Position 3.

Doseringen af afspændingsmiddel kan indstilles fra position 1 (laveste dosering) til position 4 (højeste dosering).

Drei på vælgeren til afspændingsmiddel 4 for at øge eller reducere doseringen.

MUITITAB-FUNKTION

Multitab-funktionen er til kombinerede opvaskemidler i tabletform (tabs). Disse tabletter indeholder vaskemiddel, afspændingsmiddel og opvaskesalt. Nogle typer af tabletter kan indeholde andre midler

Vær sikker på, at disse tabletter er velegnede til det lokale vands hårdhedsgrad (se instruktionerne på produkternes emballage).

Multitab-funktionen stopper automatisk tilsætning af afspændingsmiddel og salt. Multitab-funktionen deaktiverer automatisk kontrollamper til afspændingsmiddel og salt. Programmets varighed kan blive forlænget, hvis du bruger Multitab-funktionen.



Slå Multitab-funktionen fra eller til, før opvaskeprogrammet starter. Du kan ikke slå funktionen til eller fra, mens et opvaskeprogram kører.

Sådan aktiveres Multitab-funktionen

- Tryk på Multitab-knappen, og Multitab-lampen lyser. Funktionen aktiveres.
 - Når du har aktiveret Multitab-funktionen, er den slået til, indtil du slår den fra.

Sådan deaktiveres multitab-funktionen ved brug af separat opvaskemiddel, salt og afspændingsmiddel

- 1. Tryk på Multitab-knappen, og Multitab-lampen slukkes. Funktionen deaktiveres.
- 2. Fyld saltbeholderen og beholderen til afspændingsmiddel op.
- 3. Indstil blødgøringsanlægget til højeste niveau.
- 4. Start et opvaskeprogram med tom maskine.
- 5. Indstil blødgøringsanlægget til det lokale vands hårdhedsgrad, når opvaskeprogrammet er afsluttet.
- 6. Justér mængden af afspændingsmiddel.

PLACERING AF RESTIK OG SERVICE



Se folderen "Eksempler på ProClean påfyldninger".

Råd

- Anbring ikke andre ting i opvaskemaskinen, som kan opsuge vand (svampe, klude).
- Fjern tiloversbleven mad fra tingene.
- Blødgør tiloversbleven brændt mad på disse ting.

- Stil hule ting (f.eks. kopper, glas og gryder) med åbningen nedad.
- Sørg for, at vandet ikke samler sig i beholdere eller skåle.
- Sørg for, at bestik og tallerkener m.m. ikke ligger sammen.
- Sørg for, at glas ikke rører andre glas.
- Læg små ting i bestikkurven.
- Bland skeer med andet bestik, så de ikke sætter sig sammen.
- Sørg for, at vandet kan komme til alle overflader, når du stiller tingene i kurvene.
- Læg de lette ting i øverste kurv. Sørg for, at tingene ikke kan flytte sig.
- Vanddråber kan samle sig på ting i plast og på "slip-let"-pander og gryder.

TØRREPROGRAMMER

Program	Graden af snavs	Type af opvask	Beskrivelse af pro- grammet
1 AUTO 45°-70°	Alle	Service, bestik, gryder og pander	Forskyl Opvask 45 °C eller 70 °C Skylninger Tørring
PRO 70°	Meget snavset	Service, bestik, gryder og pander	Forskyl Opvask 70 °C Skylninger Tørring
3 Extra SILENT 50° 2)	Normalt snavset	Service og bestik	Forskyl Opvask 50 °C Skylninger Tørring
4 Quick 30MIN 60° 3)	Frisk snavset	Service og bestik	Opvask 60 °C Skylning
5 ECO 50° 4)	Normalt snavset	Service og bestik	Forskyl Opvask 50 °C Skylninger Tørring
6 Quick 50 MIN 55°	Let snavset	Service og bestik	Opvask 55 °C Skylninger
⁷ 45°	Normalt eller let snavset	Finere porcelæn og glas	Opvask 45 °C Skylninger Tørring

Program	Graden af snavs	Type af opvask	Beskrivelse af pro- grammet
**************************************	ner. Det forhindrer, at		Skylning

- 1) Apparatet registrerer typen af snavs og antallet af genstande i kurvene. Temperaturen, mængden af vand, energiforbruget og programtiden justeres automatisk.
- 2) Dette er stilleprogrammet. Pumpen arbejder ved meget lav hastighed for at nedsætte støjniveauet. På grund af den lave hastighed varer programmet længe.
- 3) Med dette program kan du vaske en opvask med frisk snavs. Det giver gode opvaskeresultater i løbet af kort tid.
- 4) Dette er standardprogrammet til prøveanstalter. Med dette program får du den mest effektive brug af vand og energiforbrug til service og bestik med normalt snavs. Se den medfølgende folder med testinformation.

Funktioner

Program	Ekstra hygiejnisk	ÖKO PLUS
1 AUTO 45°-70°	Ja, med varme	Ja, med varme
PRO 70°	Ja, uden varme	Ja, med varme
3 Extra SILENT 50°	Ja, uden varme	Ja, uden varme
4 Quick 30MIN 60°	Ja, med varme	Ja, uden varme
5 ECO 50°	Ja, med varme	Ja, med varme
6 Quick 50MIN 55°	Ja, med varme	Ja, uden varme
⁷ / ₂ 45°	Ja, uden varme	Ja, med varme
**************************************	Ja, uden varme	Ja, uden varme

Forbrugsværdier

Totol agovernie					
Program	Programtid (minut)	Energi (kWh)	Vand (liter)		
1 AUTO 45°-70°	90 - 160	0,9 - 1,7	8 - 15		
PRO 70°	140 - 160	1,4 - 1,6	13 - 14		
3 Extra SILENT 50°	200 - 220	1,1 - 1,2	9 - 11		
4 Quick 30MIN 60°	30	0.8	9		
5 ECO 50°	160 - 170	0,9 - 1,0	9 - 11		
6 Quick 50MIN 55°	50 - 60	1,0 - 1,1	10 - 11		
⁷ 45°	65 - 75	0,8 - 0,9	11 - 12		
**************************************	14	0,1	4		



Energiforbruget kan variere, alt efter vandtemperatur og -tryk, udsving i netspænding og opvaskens størrelse.

VALG OG START AF OPVASKEPROGRAM

Start af opvaskeprogrammet uden senere start

- 1. Tænd for apparatet.
- 2. Sørg for, at apparatet står på indstillingsfunktionen.
- 3. Indstil opvaskeprogrammet.
 - Nummeret for opvaskeprogrammet blinker på displayet.
- 4. Indstil om nødvendigt ekstra hygiejne-funktionen eller ÖKO PLUS-funktionen.
 - Funktionerne skal altid vælges, efter opvaskeprogrammet er indstillet.
- 5. Luk opvaskemaskinens låge. Opvaskeprogrammet starter automatisk.

Start af opvaskeprogrammet med udskudt start

- 1. Tænd for apparatet.
- 2. Sørg for, at apparatet står på indstillingsfunktionen.
- 3. Indstil opvaskeprogrammet og funktionerne.
- 4. Tryk gentagne gange på knappen til udskudt start, indtil displayet viser tiden for den udskudte start.
 - Tiden til den udskudte start blinker på displayet.
 - Lampen for udskudt start lyser.
- 5. Luk opvaskemaskinens låge. Programmet starter automatisk.

Når nedtællingen er slut, starter opvaskeprogrammet automatisk.



Hvis lågen åbnes, standser nedtællingen. Når lågen lukkes igen, fortsætter nedtællingen det sted, hvor den blev afbrudt.

Annullering af udskudt start

Nedtællingen er ikke i gang

- Tryk gentagne gange på knappen til udskudt start, indtil displayet viser nummeret på opvaskeprogrammet.
 - Nummeret blinker i displayet.
- 2. Luk opvaskemaskinens låge. Opvaskeprogrammet starter automatisk.

Nedtællingen er i gang

- 1. Åbn lågen.
- 2. Tryk gentagne gange på knappen til udskudt start, indtil displayet viser nummeret på opvaskeprogrammet.
 - Nummeret blinker i nogle sekunder, og derefter vises opvaskeprogrammets tid i displayet.
- 3. Luk opvaskemaskinens låge. Opvaskeprogrammet starter automatisk.

Afslutning på opvaskeprogrammerne

- Åbn lågen.
 - Opvaskeprogrammet stopper.
- Luk lågen til opvaskemaskinen.
 - Programmet fortsætter det sted, hvor det blev afbrudt.

Annullering af opvaskeprogrammet

Hvis opvaskeprogrammet ikke er startet, kan du ændre valget.

Det er nødvendigt at annullere programmet for at ændre valget, mens opvaskeprogrammet er i gang.

• Tryk på RESET -knappen, indtil displayet viser to vandrette statuslinjer.



Sørg for, at der er opvaskemiddel i beholderen til opvaskemiddel, inden der startes et nyt opvaskeprogram.

Afslutning på opvaskeprogrammet

Når opvaskeprogrammet er færdigt, udsendes der et lydsignal.

- 1. Åbn lågen.
 - Slutlampen lyser.
 - Displayet viser et nul.
- 2. Sluk for apparatet.
- 3. Lad lågen stå på klem i nogle minutter for at opnå bedre tørring.

Fjern tingene fra kurvene

- Lad opvasken køle af, før du tager den ud af maskinen. Tallerkener m.m. er skrøbelige, når de er meget varme.
- Tøm først nederste kurv og derefter øverste kurv.
- Der kan være vand på maskinens sider og låge. Rustfrit stål køler hurtigere af end tallerkener.


VEDLIGEHOLDELSE OG RENGØRING

Sådan fjernes og renses filtre

Snavsede filtre forringer opvaskeresultatet.

Selvom vedligeholdelsen er meget begrænset med disse filtre, bør du jævnligt efterse maskinen og om nødvendigt rense filtrene.


1. Drej filteret (A) mod uret og fjern det fra filteret (B).

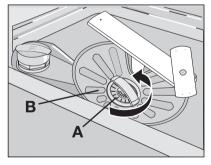

- 2. Filteret (A) består af to dele. Filteret adskilles ved at trække delene fra hinanden.
- 3. Rens delene grundigt med vand.
- 4. Sæt det todelte filter (A) sammen, og pres. Sørg for, at delene samles korrekt.
- 5. Fiern filteret (B).
- 6. Rens filteret (B) grundigt med vand.



- 7. Sæt filteret (B) på plads igen. Sørg for, at det samles korrekt i de to skinner (C).
- 8. Sæt filteret (A) på plads i filteret (B). Drei filteret (A) med uret, indtil det låses fast.

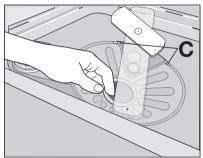

Sådan rengøres spulearmene:

Fjern ikke spulearmene.

Hvis hullerne i spulearmene tilstoppes, kan det tiloversblevne snavs fjernes med en spids genstand.

Sådan renses de vdre overflader:

Rengør opvaskemaskinens udvendige sider og betjeningspanelet med en blød, fugtig klud. Brug kun et neutralt rengøringsmiddel.

Brug ikke slibende midler, skuresvampe eller opløsningsmidler (f.eks. acetone).

HVIS NOGET GÅR GALT

Maskinen starter ikke, eller den stopper midt i et program.

Forsøg først at finde en løsning på problemet (se tabel). Kontakt servicecentret, hvis dette ikke hiælper.

Ved visse feilfunktioner viser displayet en alarmkode:

- , /// Maskinen tager ikke vand ind
- naskinen tømmes ikke
- 1377 Overløbssikringen er tændt



ADVARSEL

Sluk for maskinen, inden du udfører eftersynet.

Fejl	Mulig årsag	Mulig løsning
Maskinen tager ikke vand ind.	Vandtilslutningen er blokeret eller kalket til.	Rengør vandtilslutningen.
	Vandtrykket er for lavt.	Kontakt det lokale vandværk.
	Der er lukket for vandet.	Åbn for vandhanen.
	Filteret i tilløbsslangen er stoppet.	Rens filteret.
	Tilløbsslangen er ikke tilsluttet korrekt.	Kontroller, at tilslutningen er i orden.
	Tilløbsslangen er beskadiget.	Sørg for, at tilløbsslangen er intakt.
Maskinen tømmes ikke for vand.	Køkkenvaskens vandlås er tilstoppet.	Rens vandlåsen.
	Afløbsslangen er ikke tilsluttet korrekt.	Kontroller, at tilslutningen er i orden.
	Afløbsslangen er beskadiget.	Sørg for, at afløbsslangen er intakt.
Overløbssikringen er tændt.		Luk for vandhanen, og kontakt servicecentret.
Opvaskeprogrammet går ikke i gang.	Lågen er åben.	Luk lågen til opvaskemaskinen.
	Stikket er ikke sat i kontakten.	Sæt stikket i stikkontakten.
	Sikringen på husets eltavle er beskadiget.	Udskift sikringen.
	Senere start er indstillet.	 Annullér Senere start. Når nedtællingen er slut, starter opvaskeprogrammet automatisk.

Tænd for maskinen, når den er kontrolleret. Programmet fortsætter det sted, hvor det blev afbrudt.

Kontakt det lokale servicecenter, hvis den samme fejl opstår igen.

Kontakt det lokale servicecenter, hvis displayet viser andre alarmkoder.

De nødvendige oplysninger til servicecenteret er angivet på maskinens typeskilt. Nedskriv disse oplysninger:

-	Model	(MOD.)	l
---	-------	--------	---

- Produktnummer (PNC)
- Serienummer (S.N.)

Opvaske- og tørringsresultaterne er utilfredsstillende

r.:	N4 1:	Malia Issaina
Fejl	Mulig årsag	Mulig løsning
Opvasken er ikke ren.	Opvaskeprogrammet passer ikke til opvaskens art og graden af snavs.	Sørg for, det valgte opvaske- program passer til opvaskens art og graden af snavs.
	Du lagde ikke gestandene kor- rekt i kurvene, og vandet rørte ikke ved alle overflader.	Læg gentandene korrekt i kurvene.
	Spulearmene kunne ikke dreje frit. Genstandene var lagt forkert i kurvene.	Kontroller, at en ukorrekt pla- cering af genstandene ikke blo- kerer for spulearmene.
	Filtrene er snavsede eller monteret forkert.	Sørg for, at filtrene er rene og korrekt monteret.
	Der er brugt for lidt eller intet opvaskemiddel.	Sørg for, der er tilstrækkeligt med opvaskemiddel.
Der er kalkaflejringer på servicet.	Saltbeholderen er tom.	Fyld saltbeholderen op med filtersalt.
	Forkert hårdhedsgrad for blød- gøringsanlægget.	Justér blødgøringsanlægget med det korrekte niveau.
	Dækslet på saltbeholderen er ikke lukket korrekt.	Sørg for, at saltbeholderens hætte er lukket korrekt.
Der er striber, hvide pletter eller en blålig belægning på glas og service.	Der er brugt for meget afspændingsmiddel.	Nedsæt mængden af afspændingsmiddel.
Der er spor efter indtørrede vanddråber på glas og service.	Der er brugt for lidt afspændingsmiddel.	Øg mængden af afspændings- middel.
	Det kan skyldes opvaskemidlet.	Brug en anden type opvaske-middel.
Opvasken er våd.	Opvaskeprogrammet var uden en tørrefase eller med en nedsat tørrefase.	Lad lågen stå på klem i nogle minutter for at opnå bedre tør- ring.
Opvasken er våd og mat.	Beholderen til afspændings- middel er tom.	Fyld beholderen til afspændingsmiddel op.
	Multitab-funktionen er tændt (denne funktion slår automatisk beholderen til afspændingsmiddel fra).	Aktiver beholderen til afspændingsmiddel.

Aktivering af beholderen til afspændingsmiddel.

- 1. Tænd for apparatet.
- 2. Sørg for, at apparatet står på indstillingsfunktionen.
- 3. Tryk på knap (4) og knap (5) og hold dem nede på samme tid, indtil kontrollamperne for knap (3), (4) og (5) blinker.

- 4. Giv slip på knap (4) og knap (5).
- 5. Tryk på knap (4).
 - Lamperne for knap (3) og (5) slukkes.
 - Lamperne for knap (4) fortsætter med at blinke.
 - Displayet viser indstillingen af beholderen til afspændingsmiddel.


0 d	Beholderen til afspændingsmiddel er slået fra.
l d	Beholderen til afspændingsmiddel er slået til.


- 6. Tryk på knap (4) for at ændre indstillingen.
- 7. Deaktiver maskinen for at bekræfte.

TEKNISKE DATA

Mål	Bredde	596 mm
	Højde	818 - 898 mm
	Dybde	550 mm
Vandtilførslens tryk	Minimum	0,5 bar (0,05 MPa)
	Maksimum	8 bar (0,8 MPa)
Vandtilførsel ¹⁾	Koldt vand eller varmt vand	Maksimalt 60 ℃
Kapacitet	Antal kuverter	12

¹⁾ Forbind tilførselsslangen til en vandtilslutning/lukkeventil med et 3/4"-gevind.





MII IØHFNSYN

Symbolet på produktet eller på pakken angiver, at dette produkt ikke må behandles som husholdningsaffald. Det skal i stedet overgives til en affaldsstation for behandling af elektrisk og elektronisk udstyr. Ved at sørge for at dette produkt bliver bortskaffet på den rette måde, hjælper du med til at forebygge eventuelle negative påvirkninger af miljøet og af personers helbred, der ellers kunne forårsages af forkert bortskaffelse af dette produkt. Kontakt det lokale kommunekontor, affaldsselskab eller den forretning, hvor produktet er købt, for yderligere oplysninger om genanvendelse af dette produkt. Genbrug materialer med symbolet Anbring indpakningen i passende beholdere for at genbruge den.

FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler – features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

ACCESSORIES AND CONSUMABLES

In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags...











Visit the webshop at: www.aeg-electrolux.com/shop

CONTENTS

- 27 Safety information
- 31 Product description
- 32 Control panel
- 34 Use of the appliance
- 35 Setting the water softener
- 36 Use of dishwasher salt
- 37 Use of detergent and rinse aid
- 38 Multitab function
- 38 Loading cutlery and dishes
- 39 Washing programmes
- 41 Select and start a washing programme
- 43 Care and cleaning
- 44 What to do if...
- 47 Technical data
- 47 Environment concerns

The following symbols are used in this user manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips



Environmental information

Subject to change without notice



SAFETY INFORMATION

Before the installation and use, read this manual carefully:

- For your safety and the safety of your property.
- To help the environment.
- For the correct operation of the appliance.

Always keep these instructions with the appliance also if you move or give it to a different person.

The manufacturer is not responsible if an incorrect installation and use causes damage.

Children and vulnerable persons safety

- Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge to use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.
- Keep all packaging away from children. There is the risk of suffocation or injury.
- Keep all detergents in a safe area. Do not let the children touch the detergents.
- Keep children and pets away from the appliance when the door is open.

General safety

- Do not change the specifications of this appliance. There is the risk of injury and damage to the appliance.
- Obey the safety instructions from the detergent manufacturer to prevent burns to eves, mouth and throat.
- Do not drink the water from the appliance. Particles of detergent can stay in your appliance.
- Do not keep the appliance door open without supervision. This to prevent injury and to fall on an open door.
- Do not sit or stand on the open door.

Use

- The appliance is only for domestic use. Do not use the appliance for other uses to prevent injury to persons and damage to property.
- Only use the appliance to clean accessories that are applicable for dishwashers.
- Do not put flammable products or items that are wet with flammable products in. near or on the appliance. Risk of explosion or fire.
- Put the knives and all items with sharp points in the cutlery basket with their points down. If not, put in a horizontal position in the upper basket or in the knife basket. (Not all models have the knife basket).
- Use only specified products for dishwashers (detergent, salt, rinse aid).
- Types of salt that are not specified for dishwashers can cause damage to the water softener.
- Fill the appliance with salt before you start a washing programme. Remaining salt in the appliance can cause corrosion or make a hole in the bottom of the appliance.

- Do not fill the rinse aid dispenser with other products than the rinse aid, (dishwasher cleaning agent, liquid detergent). This can cause damage to the appliance.
- Make sure that the spray arms can move freely before you start a washing programme.
- The appliance can release hot steam if you open the door while a washing programme operates. There is a risk of skin burns.
- Do not remove the dishes from the appliance until the washing programme is completed.

Care and cleaning

- Before you clean the appliance, deactivate it and disconnect the mains plug from the mains socket.
- Do not use flammable products or products that can cause corrosion.
- Do not use the appliance without the filters. Make sure that the installation of the filters is correct. An incorrect installation causes unsatisfactory washing results and damage to the appliance.
- Do not use spray water or steam to clean the appliance. Risk of electrical shock and damage to the appliance.

Installation

- Make sure that the appliance is not damaged. Do not install or connect a damaged appliance, contact the supplier.
- Remove all packaging before you install and use the appliance.
- Only a qualified person must do the electrical connection, the plumbing and the installation of the appliance. This to prevent the risks of structural damage or injury.
- Make sure that the mains plug is disconnected from the mains socket during installation.
- Do not drill into the sides of the appliance to prevent damage to hydraulic components and electrical components.
- Important! Obey the instructions in the template supplied with the appliance:
 - To install the appliance.
 - To assemble the door panel.
 - To connect to the water supply and drain.
- Make sure that the appliance is installed below and adjacent to safe structures.

Frost precautions

- Do not install the appliance where the temperature is less than 0 °C.
- The manufacturer is not responsible for frost damage.

Water connection


- Use new hoses to connect the appliance to the water supply. Do not use used hoses.
- Do not connect the appliance to new pipes or pipes not used for a long time. Let the water flow for some minutes, then connect the inlet hose.
- Make sure not to squash or cause damage to the water hoses when you install the appliance.
- Make sure that the water couplings are tight to prevent a water leakage.
- The first time you use the appliance, make sure that the hoses do not have water leaks.

- The water inlet hose has a safety valve and a double sheath with an inner mains cable. There is pressure in the water inlet hose only when the water flows. If there is a leak in the water inlet hose, the safety valve interrupts the flow of water.
 - Be careful when you connect the water inlet hose:
 - Do not put the water inlet hose or the safety valve in water.
 - If the water inlet hose or the safety valve are damaged, immediately disconnect the mains plug from the mains socket.
 - Contact the service centre to replace the water inlet hose with safety valve.



WARNING!

Dangerous voltage.

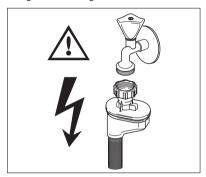

Electrical connection

- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply.
- Always use a correctly installed shockproof socket.
- Do not use multiple plugs and extension cables. There is a risk of fire.
- Do not replace or change the mains cable. Contact the service centre.
- Make sure not to squash or cause damage to the mains plug and cable behind the appliance.
- Make sure that there is access to the mains plug after the installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- The appliance has a 13 amp mains plug. If it is necessary to change the fuse in the mains plug, use a 13 amp ASTA (BS 1362) fuse.

Internal lamp

This appliance has an internal lamp that comes on when you open the door and goes off when the door is closed.



WARNING!

Visible led radiation, do not look directly into the beam.

The LED of the lamp is CLASS 2 and agrees with IEC 60825-1: 1993 + A1:1997 + A2:2001.

Emission wave length: 450 nm Maximum emitted power: 548 μW



To replace the internal lamp, contact the service centre.

Disconnect the mains plug from the mains socket before the replacement of the internal lamp.

Service centre

- Only a qualified person can repair or work on the appliance. Contact the service centre.
- Use only original spare parts.

To discard the appliance

- To prevent the risk of injury or damage:
 - Disconnect the mains plug from the mains socket.
 - Cut off the mains cable and discard it.
 - Remove the door catch. This prevents children or pets to be closed in the appliance.
 There is a risk of suffocation.
 - Discard the appliance at the local waste disposal centre.




WARNING!

The dishwasher detergents are dangerous and can cause corrosion!

- If an accident occurs with these detergents, contact immediately a physician.
- If the detergent gets into the mouth, contact immediately a physician.
- If the detergent gets into the eyes, contact immediately a physician and clean the eyes with water.
- Keep dishwasher detergents in a safe area and out of children touch.
- Do not keep the appliance door open when there is detergent in the detergent dispenser.
- Fill the detergent dispenser only before you start a washing programme.

PRODUCT DESCRIPTION

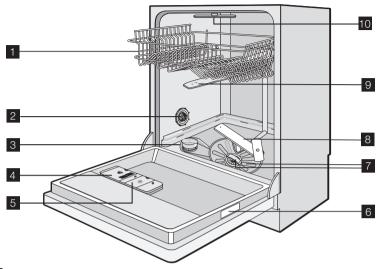

- 1 Upper basket
- 2 Water hardness dial
- 3 Salt container
- 4 Detergent dispenser
- 5 Rinse aid dispenser
- 6 Rating plate
- 7 Filters
- 8 Lower spray arm
- 9 Upper spray arm
- 10 Top spray arm

TimeBeam


TimeBeam shows, on the kitchen floor, the washing programme time or the countdown of the delav start.

With TimeBeam you always know the remaining time of the washing programme and of the delay start.

Nine different colours are available for Time-Beam. Refer to 'Control panel'.



If the appliance is installed in height, with a flush door panel, you cannot see the TimeBeam.

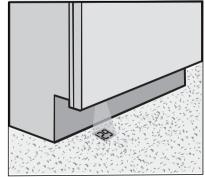


The TimeBeam shows:

- The washing programme time. It decreases with steps of one minute
- The end of the washing programme, a zero shows on the kitchen floor
- The countdown of the delay start with steps of one hour (24h, 23h...).
- TimeBeam goes off when the appliance is deactivated.

CONTROL PANEL

The controls are on the top on the control panel. To operate with the controls, keep the appliance door ajar.



- 1 On/off button
- 2 Display
- 3 Delay touchpad
- 4 Programme touchpad
- 5 Extra-Hygiene touchpad
- 6 ÖKO PLUS touchpad
- 7 Multitab touchpad
- 8 RESET touchpad
- 9 Indicators

Indicators					
\$	Salt indicator. It comes on when it is necessary to fill the salt container. ¹⁾ After you fill the container, the salt indicator can stay on for some hours. This does not have an unwanted effect on the operation of the appliance.				
*	Rinse aid indicator. It comes on when it is necessary to fill the rinse aid dispenser. ¹⁾				
\rightarrow	End indicator. It comes on when the washing programme is completed.				

¹⁾ When the salt container and/or the rinse aid dispenser are empty, the related indicators do not come on while a washing programme operates.

On/off button

Press this button to activate or deactivate the appliance.

After ten minutes from the end of the washing programme, the AUTO OFF function automatically deactivates the appliance. This helps to decrease energy consumption.

Display

The display shows:

- The electronic adjustment of the level of the water softener
- The activation and deactivation of the rinse aid dispenser (only with the multitab function on)
- The number of the washing programme
- The remaining time to the end of the washing programme
- The end of a washing programme (the display shows a zero)
- The time of the delay start
- The alarm codes
- The activation and deactivation of the acoustic signals.

Delay touchpad

Press this touchpad again and again to delay the start of the washing programme from 1 to 24 hours.

Programme touchpad

Press this touchpad again and again to set a washing programme. Each time you press the touchpad, the display shows a number that is related to a washing programme. Refer to 'Washing programmes'.

Extra-Hygiene touchpad

This function gives better results for the hygiene. During the rinsing phase, the temperature stays at 70°C for 10 to 14 minutes.

Press this touchpad to activate the function. The related indicator comes on.

ÖKO PLUS touchpad

This function decreases the temperature in the drying phase. The power consumption decreases by 25%.

The dishes can be wet at the end of the programme when you open the appliance door.

We recommend that you keep the door ajar and let the dishes dry.

Press this touchpad to activate the function. The related indicator comes on.

Multitab button

Press this touchpad to activate or deactivate the multitab function.

When you activate the function, the related indicator comes on.

When you deactivate the function, the related indicator goes off.

RESET touchpad

Press this touchpad to cancel a washing programme in operation

Setting mode

The appliance must be in setting mode for these operations:

- To set and start a washing programme.
- To set and start a delay start.

- To adjust electronically the level of the water softener.
- To activate or deactivate the rinse aid dispenser (only with the multitab function on).
- To deactivate or activate the acoustic signals.

Activate the appliance. The appliance is in setting mode when:

• The display shows two horizontal status bars.

Activate the appliance. The appliance is not in setting mode when:

- The display shows the time of the washing programme or of the delay start.
 - It is necessary to cancel the programme or the delay start to go back to the setting mode. Refer to 'Select and start a washing programme'.

Acoustic signals

You can hear the acoustic signals in these conditions:

- The washing programme is completed.
- The level of the water softener is adjusted electronically.
- The appliance has a malfunction.



Factory setting: on.

Deactivating the acoustic signals

- 1. Activate the appliance.
- 2. Make sure that the appliance is in setting mode.
- 3. Press and hold touchpad (4) and touchpad (5) at the same time until the indicators of touchpads (3), (4) and (5) flash.
- 4. Release touchpad (4) and touchpad (5).
- 5. Press touchpad (5),
 - The indicators of touchpads (3) and (4) go off.
 - The indicator of touchpad (5) continues to flash.
 - The display shows the setting of the acoustic signals.

<i>Ib</i>	The acoustic signals are on.
ОЬ	The acoustic signals are off.

- 6. Press touchpad (5) to change the setting.
- 7. Deactivate the appliance to confirm.

To activate the acoustic signals again, do steps (1) through (7).

USE OF THE APPLIANCE

- 1. Be sure that the set level of the water softener agrees with the water hardness in your area. If not, adjust the water softener.
- 2. Fill the salt container with dishwasher salt.
- 3. Fill the rinse aid dispenser with rinse aid.
- 4. Load cutlery and dishes into the appliance.

- 5. Set the correct washing programme for the type of load and soil.
- 6. Fill the detergent dispenser with the correct quantity of detergent.
- 7. Start the washing programme.
- If you use the combi detergent tablets ('3 in 1', '4 in 1', '5 in 1'), use the multitab function $f{i}$ (refer to 'Multitab function').

SETTING THE WATER SOFTENER

The water softener removes minerals and salts from the water supply. These minerals and salts can cause damage to the appliance.


Adjust the level of the water softener if this does not agree with the water hardness in your area.

Contact your local water authority to know the water hardness in your area.

Water hardness				Water hardness ad- justment	
German degrees (°dH)	French degrees (TH°)	mmol/l	Clarke de- grees	manually	elec- troni- cally
51 - 70	91 - 125	9,1 - 12,5	64 - 88	2 1)	10
43 - 50	76 - 90	7,6 - 9,0	53 - 63	2 1)	9
37 - 42	65 - 75	6,5 - 7,5	46 - 52	21)	8
29 - 36	51 - 64	5,1 - 6,4	36 - 45	2 ¹⁾	7
23 - 28	40 - 50	4,0 - 5,0	28 - 35	21)	6
19 - 22	33 - 39	3,3 - 3,9	23 - 27	2 ¹⁾	5 ¹⁾
15 - 18	26 - 32	2,6 - 3,2	18 - 22	1	4
11 - 14	19 - 25	1,9 - 2,5	13 - 17	1	3
4 - 10	7 - 18	0,7 - 1,8	5 - 12	1	2
< 4	< 7	< 0,7	< 5	1 ²⁾	1 ²⁾


¹⁾ Factory position.

²⁾ Do not use salt at this level.




Manual adjustment

Turn the water hardness dial to the position 1 or 2 (refer to the table).

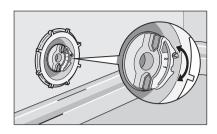

Electronic adjustment


- 1. Activate the appliance. Make sure that the appliance is in setting mode.
- 2. Press and hold touchpad (4) and touchpad (5) at the same time until the indicators of touchpads (3), (4) and (5) flash.
- 3. Release touchpad (4) and touchpad (5).
- 4. Press touchpad (3),
 - The indicators of touchpads (4) and (5) go off.
 - The indicator of touchpad (3) continues to flash.
 - The acoustic signals sound.
 - The display shows the setting of the water softener (example: 5 L and you hear five acoustic signals = level 5).
- 5. Press touchpad (3) again and again to change the setting.
- 6. Deactivate the appliance to confirm.



USE OF DISHWASHER SALT

How to fill the salt container


- 1. Turn the cap counterclockwise and open the salt container.
- 2. Fill the salt container with 1 litre of water (only for the first time you fill with salt).
- 3. Use the funnel to fill the salt container with salt.
- 4. Remove the salt around the opening of the salt container.
- 5. Turn the cap clockwise to close the salt container.

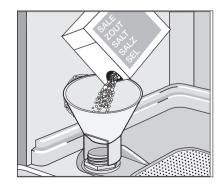



It is correct that water comes out from the salt container when you fill it with salt.

USE OF DETERGENT AND RINSE AID

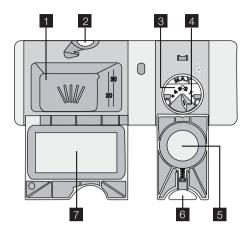


Use of detergent



To help the environment, do not use more than the correct quantity of detergent. Obey the instructions on the detergent packaging.

How to fill the detergent dispenser:

- 1. Press the release button 2 to open the lid 7 of the detergent dispenser.
- 2. Put the detergent in the dispenser 1.
- 3. If the washing programme has a prewash phase, put a small quantity of detergent on the inner part of the appliance door.
- 4. If you use the detergent tablets, put the tablet in the detergent dispenser 1.
- 5. Close the detergent dispenser. Press the lid until it locks into position.



Use of rinse aid



Rinse aid makes it possible to dry the dishes without streaks and stains. The rinse aid dispenser automatically adds rinse aid during the last rinsing phase.

Do these steps to fill the rinse aid dispenser:

- 1. Press the release button 6 to open the lid 5 of the rinse aid dispenser.
- 2. Fill the rinse aid dispenser 3 with rinse aid. The mark 'max' shows the maximum level.
- 3. Remove the spilled rinse aid with an absorbent cloth to prevent too much foam during the washing programme.
- 4. Close the rinse aid dispenser. Press the lid until it locks into position.

Adjust the rinse aid dosage

Factory set: position 3.

You can set the rinse aid dosage between position 1 (lowest dosage) and position 4 (highest dosage).

Turn the rinse aid selector 4 to increase or decrease the dosage.

MULTITAB FUNCTION

The multitab function is for combi detergent tablets.

These tablets contain agents as detergent, rinse aid and dishwasher salt. Some types of tablets can contain other agents.

Be sure that these tablets are applicable for the water hardness in your area (refer to the instructions on the packaging of the products).

The multitab function deactivates the flow of rinse aid and salt.

The multitab function deactivates the indicators of salt and rinse aid.

The programme duration can increase if you use the multitab function.



Activate or deactivate the multitab function before the start of a washing programme. You cannot activate or deactivate the function when a washing programme operates.

To activate the multitab function

- Press the multitab touchpad, the multitab indicator comes on. The function is activated.
 - When you activate the multitab function, it stays on until you deactivate it.

To deactivate the multitab function and use separately detergent, salt and rinse aid

- Press the multitab touchpad, the multitab indicator goes off. The function is deactivated.
- 2. Fill the salt container and the rinse aid dispenser.
- 3. Adjust the water hardness to the highest level.
- 4. Start a washing programme without dishes.
- 5. When the washing programme is completed, adjust the water softener to the water hardness in your area.
- 6. Adjust the quantity of rinse aid.

LOADING CUTLERY AND DISHES



Refer to the leaflet 'Examples of ProClean loads'.

Hints and tips

- Do not put in the appliance items that can absorb water (sponges, household cloths).
- Remove the remaining food from the items.
- Make soft the remaining burned food on the items.
- Put hollow items (cups, glasses and pans) with the opening down.
- Make sure that water does not collect in containers or in bowls.
- Make sure that cutlery and dishes do not bond together.
- Make sure that the glasses do not touch other glasses.

- Put small items in the cutlery basket.
- Mix the spoons with other cutlery to prevent them to bond together.
- When you put the items in the baskets, make sure that the water can touch all surfaces.
- Put light items in the upper basket. Make sure that the items do not move.
- Water droplets can collect on plastic items and non-stick pans.

WASHING PROGRAMMES

Programme	Type of soil	Type of load	Programme descrip- tion
1 AUTO 45°-70°	All	Crockery, cutlery, pots and pans	Prewash Wash 45 °C or 70 °C Rinses Dry
PRO 70°	Heavy soil	Crockery, cutlery, pots and pans	Prewash Wash 70 °C Rinses Dry
3 Extra SILENT 50° 2)	Normal soil	Crockery and cutlery	Prewash Wash 50 °C Rinses Dry
4 Quick 30MIN 60° 3)	Fresh soil	Crockery and cutlery	Wash 60 °C Rinse
5 ECO 50° 4)	Normal soil	Crockery and cutlery	Prewash Wash 50 °C Rinses Dry
6 Quick 50MIN 55°	Light soil	Crockery and cutlery	Wash 55 °C Rinses
⁷ 45°	Normal or light soil	Delicate crockery and glassware	Wash 45 °C Rinses Dry

Programme	Type of soil	Type of load	Programme descrip- tion
**************************************	Use this programme to quickly rinse the dishes. This prevents the remaining food to bond on the dishes and bad odours to come out from the appliance. Do not use detergent with this programme.		Rinse

- 1) The appliance senses the type of soil and the quantity of items in the baskets. It automatically adjusts the temperature and quantity of the water, the energy consumption and the programme time.
- 2) This is the most silent washing programme. The pump works at a very low speed to decrease the level of noise. Because of the low speed, the programme time is long.
- 3) With this programme you can wash a load with fresh soil. It gives good washing results in a short time.
- 4) This is the standard programme for test institutes. With this programme you have the most efficient use of water and energy consumption for crockery and cutlery with normal soil. Refer to the supplied leaflet for test information.

Functions

Programme	Extra-Hygiene	ÖKO PLUS
1 AUTO 45°-70°	Yes, with effect	Yes, with effect
PRO 70°	Yes, without effect	Yes, with effect
3 Extra SILENT 50°	Yes, without effect	Yes, without effect
4 Quick 30MIN 60°	Yes, with effect	Yes, without effect
5 ECO 50°	Yes, with effect	Yes, with effect
6 Quick 50MIN 55°	Yes, with effect	Yes, without effect
⁷ 45°	Yes, without effect	Yes, with effect
**************************************	Yes, without effect	Yes, without effect

Consumption values

Programme Programme time (mi- Energy (kWh) Water (litre)					
rrogramme	nute)	Lileigy (KVVII)	water (intre)		
1 AUTO 45°-70°	90 - 160	0,9 - 1,7	8 - 15		
PRO 70°	140 - 160	1,4 - 1,6	13 - 14		
3 Extra SILENT 50°	200 - 220	1,1 - 1,2	9 - 11		
4 Quick 30MIN 60°	30	0.8	9		
5 ECO 50°	160 - 170	0,9 - 1,0	9 - 11		
6 Quick 50MIN 55°	50 - 60	1,0 - 1,1	10 - 11		
⁷ 45°	65 - 75	0,8 - 0,9	11 - 12		
8 ///// *	14	0,1	4		

 \mathbf{i}

The water pressure and temperature, the variations of the mains supply and the quantity of dishes can change the consumption values.

SELECT AND START A WASHING PROGRAMME

Starting the washing programme without delay start

- 1. Activate the appliance. Make sure that the appliance is in setting mode.
- 2. Set the washing programme.
 - The number related to the washing programme flashes in the display.
- 3. If necessary, set the extra-hygiene or ÖKO PLUS function.
 - The selection of these functions must always occur after the set of the washing programme.
- 4. Close the appliance door, the washing programme starts automatically.

Starting the washing programme with delay start

- 1. Activate the appliance.
- 2. Make sure that the appliance is in setting mode.
- 3. Set the washing programme and functions.
- 4. Press the delay touchpad again and again until the display shows the time of the delay start.
 - The time of the delay start flashes in the display.
 - The delay indicator is on.
- 5. Close the appliance door, the countdown starts automatically.

When the countdown is completed, the washing programme starts automatically.

 $oxed{\mathbf{i}}$

The opening of the appliance door interrupts the countdown. When you close the door, the countdown continues from the point of interruption.

Cancelling the delay start

The countdown is not operating

- 1. Press the delay touchpad again and again until the display shows the number of the washing programme.
 - The number flashes in the display.
- 2. Close the appliance door, the washing programme starts automatically.

The countdown is operating

- 1. Open the appliance door.
- 2. Press the delay touchpad again and again until the display shows the number of the washing programme.
 - The number flashes for some seconds and then the time of the washing programme shows in the display.
- 3. Close the appliance door, the washing programme starts automatically.

Interruption of a washing programme

- Open the appliance door.
 - The washing programme stops.
- Close the appliance door.
 - The washing programme continues from the point of interruption.

Cancelling the washing programme

If the washing programme has not started, you can change the selection.

To change the selection while the washing programme operates, it is necessary to cancel the programme.

• Press the RESET touchpad until the display shows two horizontal status bars.



Make sure that there is detergent in the detergent dispenser before you start a new washing programme.

End of the washing programme

When the washing programme is completed, an intermittent acoustic signal sounds.

- 1. Open the appliance door.
 - The end indicator is on
 - The display shows a zero.
- 2. Deactivate the appliance.
- 3. For better drying results, keep the appliance door ajar for some minutes.

Remove the items from the baskets


- Let the dishes become cold before you remove them from the appliance. Hot dishes can be easily damaged.
- First remove the items from the lower basket, then from the upper basket.
- There can be water on the sides and on the door of the appliance. Stainless steel becomes cool more quickly than the dishes.

CARE AND CLEANING

To remove and clean the filters

Dirty filters decrease the washing results. Although the maintenance is very low with these filters, make a check at intervals and if necessary, clean them.


1. Turn the filter (A) counterclockwise and remove it out from filter (B).

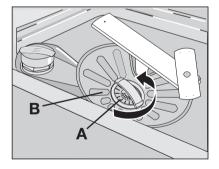

- 2. Filter (A) has two parts. To disassemble the filter, pull them apart.
- 3. Fully clean the parts with water.
- 4. Put the two parts of the filter (A) together and push. Make sure that they assemble correctly in each other.
- 5. Remove the filter (B).
- 6. Fully clean the filter (B) with water.



- 7. Put the filter (B) to its initial position. Make sure that it assembles correctly in the two guides (C).
- 8. Put the filter (A) into position in filter (B). Turn the filter (A) clockwise until it locks.

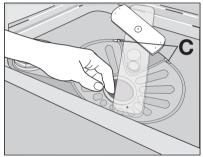

To clean the spray arms

Do not remove the spray arms.

If the holes in the spray arms become clogged, remove remaining parts of soil with a thin pointed object.

To clean the external surfaces

Clean the external surfaces of the appliance and control panel with a moist soft cloth. Only use neutral detergents.

Do not use abrasive products, abrasive cleaning pads or solvents (acetone).

WHAT TO DO IF...

The start of the appliance does not occur or it stops during operation.

First try to find a solution to the problem (refer to the table). If not, contact the service centre.

With some malfunctions, the display shows an alarm code:

- , /// The appliance does not fill with water
- 120 The appliance does not drain the water
- ,30 The anti-flood device is on.



WARNING!

Deactivate the appliance before you do the checks.

Malfunction	Possible cause	Possible solution
The appliance does not fill with water.	The water tap is blocked or there is limescale on it.	Clean the water tap.
	The water pressure is too low.	Contact your local water authority.
	The water tap is closed.	Open the water tap.
	The filter in the water inlet hose is blocked.	Clean the filter.
	The connection of the water inlet hose is not correct.	Make sure that the connection is correct.
	The water inlet hose is damaged.	Make sure that the water inlet hose has no damages.
The appliance does not drain the water.	There is a blockage in the sink spigot.	Clean the sink spigot.
	The connection of the water drain hose is not correct.	Make sure that the connection is correct.
	The water drain hose is damaged.	Make sure that the water drain hose has no damages.
The anti-flood device is on.		Close the water tap and contact the service centre.
The start of the washing programme does not occur.	The appliance door is open.	Close the appliance door.
	The mains plug is not connected in the mains socket.	Connect the mains plug.
	The fuse in the fuse box is damaged.	Replace the fuse.
	The delay start is set.	 Cancel the delay start. When the countdown is completed, the washing pro- gramme starts automatical- ly.

After the check, activate the appliance. The programme continues from the point of interruption.

If the malfunction occurs again, contact the service centre.

If the display shows other alarm codes, contact the service centre.

The necessary information for the service centre is on the rating plate.

Record this information:

_	Model	(MOD.)	
---	-------	--------	--

- Product number (PNC)
- Serial number (S.N.)

The washing results and drying results are not satisfactory

asiming results and arying results are not satisfactory				
Problem	Possible cause	Possible solution		
The dishes are not clean.	The washing programme was not applicable for the type of load and soil.	Make sure that the washing programme is applicable for the type of load and soil.		
	You did not put the items correctly in the baskets, water did not touch all surfaces.	Put the items correctly in the baskets.		
	The spray arms could not turn freely. Incorrect position of the items in the baskets.	Make sure that an incorrect position of the items do not cause the blockage of the spray arms.		
	The filters are dirty or not assembled and installed correctly.	Make sure that the filters are clean and correctly assembled and installed.		
	The quantity of detergent was not sufficient or missing.	Make sure that the quantity of detergent is sufficient.		
Limescale particles on the dishes.	The salt container is empty.	Fill the salt container with dishwasher salt.		
	Incorrect level of the water softener adjustment.	Adjust the water softener with the correct level.		
	The salt container cap is not closed correctly.	Make sure that the salt container cap is closed correctly.		
There are streaks, whitish stains, or a bluish layer on glasses and dishes.	The rinse aid quantity is too high.	Decrease the rinse aid quantity.		
Dry water drop stains on glasses and dishes.	The rinse aid quantity is too low.	Increase the rinse aid quantity.		
	The detergent can be the cause.	Use a different brand of detergent.		
The dishes are wet.	The washing programme was without a drying phase or with a decreased drying phase.	For better drying results, keep the door ajar for some minutes.		
The dishes are wet and matt.	The rinse aid dispenser is empty.	Fill the rinse aid dispenser with rinse aid.		
	The multitab function is on (this function automatically deactivates the rinse aid dispenser).	Activate the rinse aid dispenser.		

Activating the rinse aid dispenser

- 1. Activate the appliance.
- 2. Make sure that the appliance is in setting mode.

- 3. Press and hold touchpad (4) and touchpad (5) at the same time until the indicators of touchpads (3), (4) and (5) flash.
- 4. Release touchpad (4) and touchpad (5).
- 5. Press touchpad (4).
 - The indicators of touchpads (3) and (5) go off.
 - The indicator of touchpad (4) continues to flash.
 - The display shows the setting of the rinse aid dispenser.

0 d	The rinse aid dispenser is off.
l d	The rinse aid dispenser is on.

- 6. Press touchpad (4) to change the setting.
- 7. Deactivate the appliance to confirm.

TECHNICAL DATA

Dimensions	Width	596 mm
	Height	818 - 898 mm
	Depth	550 mm
Water supply pressure	Minimum	0,5 bar (0,05 MPa)
	Maximum	8 bar (0,8 MPa)
Water supply 1)	Cold water or hot water	maximum 60 °C
Capacity	Place settings	12

¹⁾ Connect the water inlet hose to a water tap with a 3/4" thread.



The rating plate on the inner edge of the appliance door shows the electrical connection data.



If the hot water comes from alternative sources of energy, (e.g. solar panels, photovoltaic panels and aeolian), use a hot water supply to decrease energy consumption.

ENVIRONMENT CONCERNS

The symbol \(\overline{\mathbb{X}} \) on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Recycle the materials with the symbol \mathcal{C} . Put the packaging in applicable containers to recycle it.











